
LINK ALIGNMENT

It is crucial that the link is aligned on the main lobe and not on the secondary lobes. To do so, try several times until you get the best link performance.



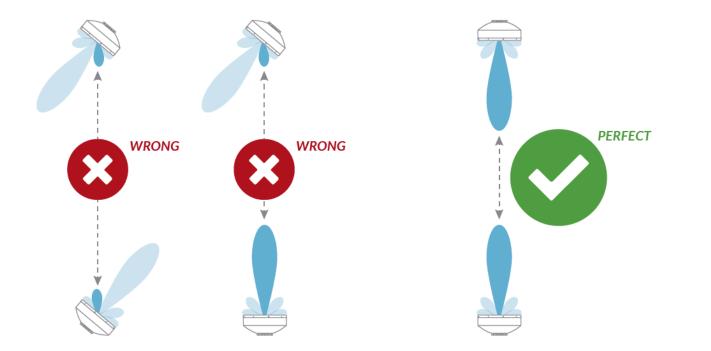

WARRANTY CONDITIONS

It is under installator's responsibility comply with the regulations applied to the installation, as well as following the instructions contained in this manual. Use only components and fasteners provided by ALGcom in the mounting kit.

Do at least one annual installation inspection to verify equipment conditions. Our products have a 3 years warranty from the date of invoice issuance.

To require the warranty, you must directly contact our CSR, by the contacts below: sac@algcom.com.br | +55 54-3201.1903

ATTENTION:

Read this manual carefully before installation or maintenance procedures, which must be made by trained professionals. In all operations, you should use PPE's that have been duly approved for this purpose.

Point-to-point antennas' line, with excellent shielding.

NAME PA-5800-32-09-DP

CONTACT US SAC | Service of Attendance to the Customer:+55 54 3201 1903 | +55 54 991414754 WHERE TO BUY? sales@algcom.com.br | +55 54 3201 1903 SUPPORT VIA CHAT AND E-MAIL: www.ALGcom.com.br

11510050159_V4







ALGcom Quality and Safety WE HAVE A STRONG QUALITY POLICY

GAIN	FREQUENCY
32 dBi	4.9 - 6,25 GHz




PA ANTENNA - DISH ANTENNA

INSTALLATION GUIDE


COMPONENTS


LETTER	DESCRIPTION	QUANTITY
А	REFLECTOR	1
В	MOUNTING HARDWARE	1
С	FEEDER	1
D	RADIO FIXING KIT	1
E	V BOLT 5/16"	2
F	5/16" L SCREW KIT	1
G	5/16" SCREW KIT	3
н	M5 SCREW	3
I	M6 SCREW	4

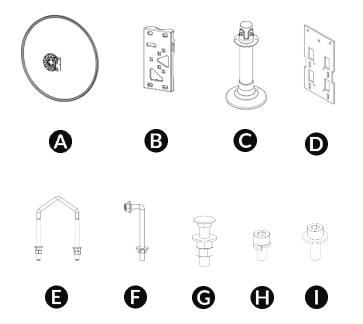



TOOLS

DESCRIPTION	
1/2" Wrench	
Allen Screw #4	
Allen Screw #5	
Phillips Screwdriver #2	

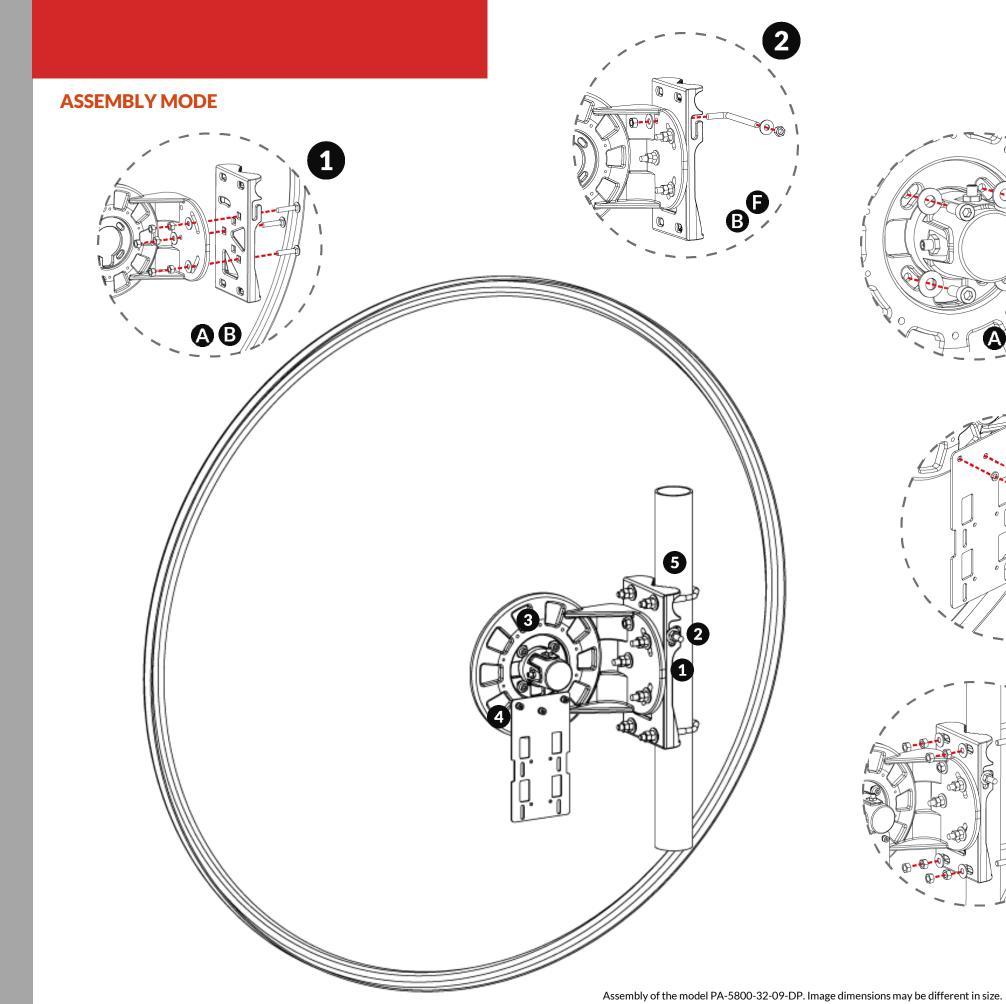

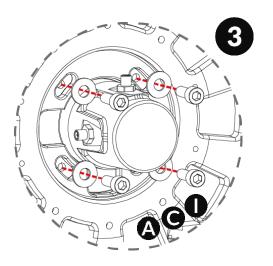

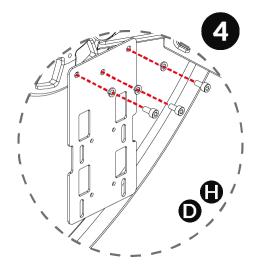

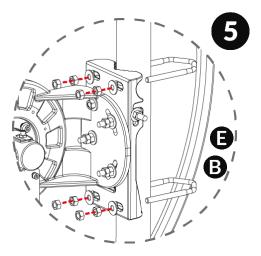

ALGcom.com.br